


断面図 平面図

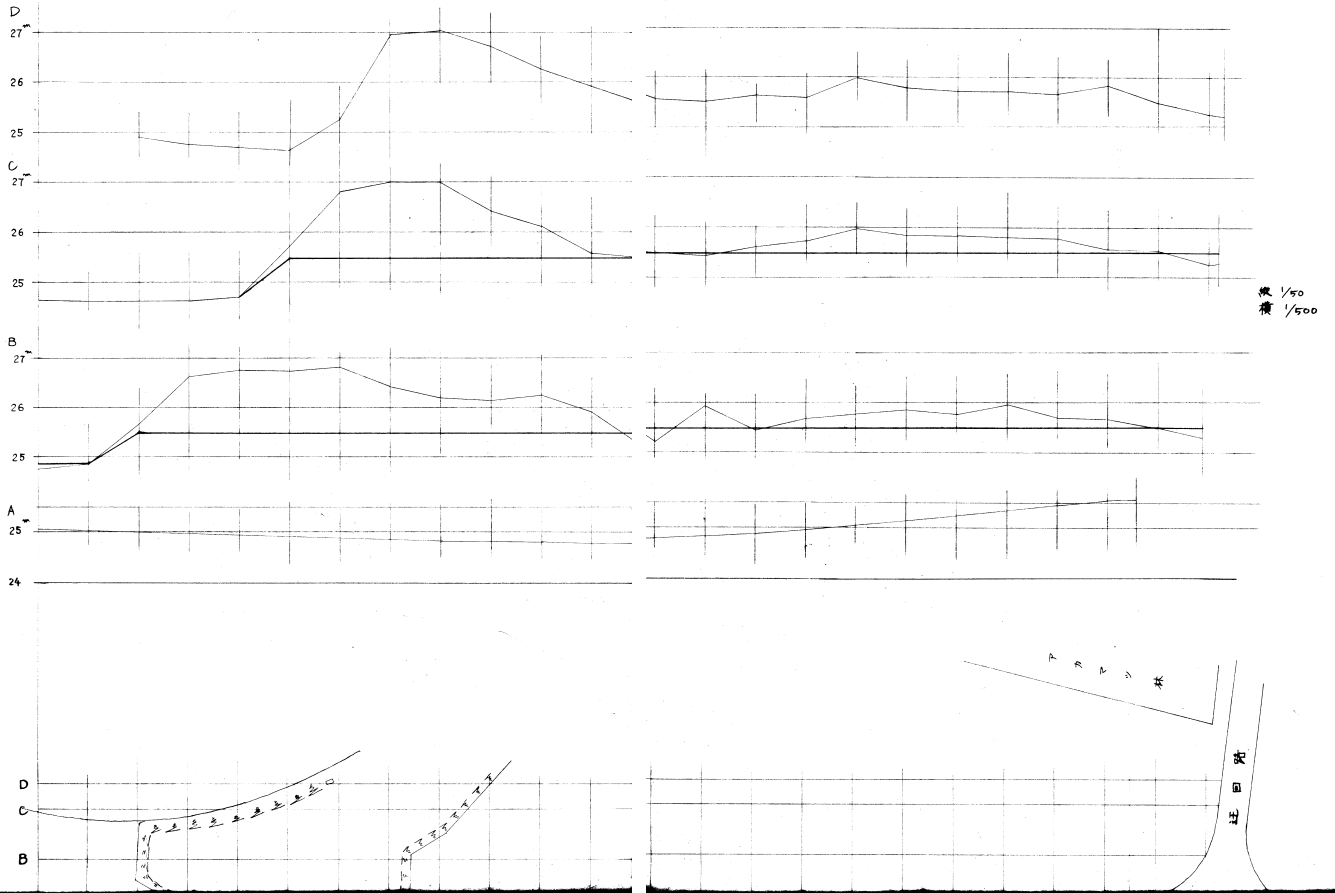

縦 1/50
横 1/500

断面図

NO	断面積		平均断面積		土量		差引	
	切土	盛土	切土	盛土	切土	盛土		
1	0.00	0.50			0.35	3.5	3.5	
2	0.00	0.20						
3	0.35	3.28	0.16	1.74	1.6	17.4	15.8	
4	6.69	1.35	3.51	2.31	35.1	23.1	12.0	
5	8.12	2.38	7.40	1.86	74.0	18.6	55.4	
6	10.28	0.74	9.20	1.56	92.0	15.6	76.4	
7	20.17	0.78	15.22	0.76	152.2	7.6	144.6	
8	21.84	1.07	21.05	0.72	210.5	9.2	201.3	
9	19.50	1.39	20.72	1.23	207.2	12.3	194.9	
10	14.19	1.47	16.84	1.43	168.4	14.3	154.1	
11	12.04	1.44	13.11	1.45	131.1	14.5	116.6	
12	4.37	2.11	8.20	1.77	82.0	17.7	64.3	
13	0.00	6.05						
14	2.75	1.81	1.37	3.93	13.7	39.3	25.6	
15	0.56	3.19	1.65	2.50	16.5	25.0	8.5	
					12.06	258.7	1019.6	72.4
							17.2	947.2

